


# Připojení střídače k WIFI.




## Postup pro nastavení Wi-fi v telefonu:

1. Vypněte si datové přenosy
2. V nastavení si zapněte Wi-fi a připojte se k Solar Wi - fi pomocí hesla 12345678

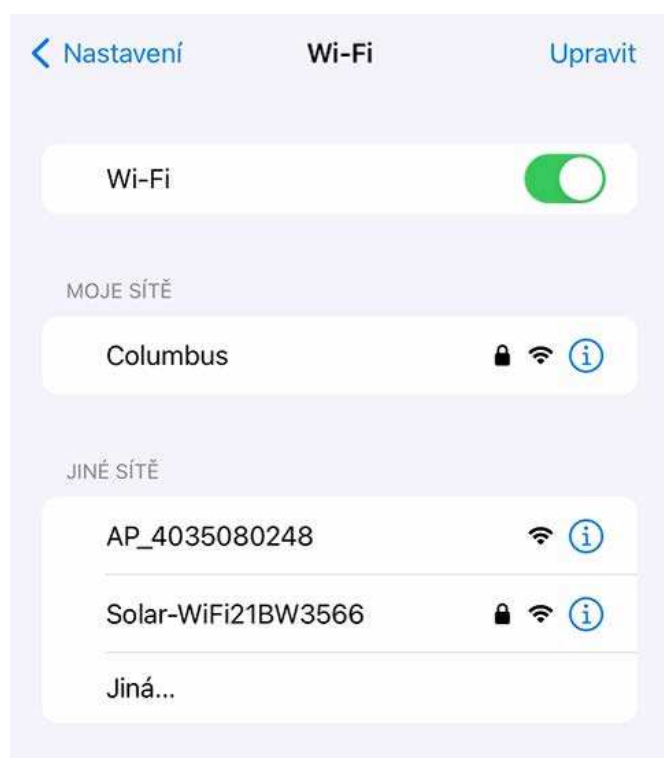


3. Po připojení k Wi - fi Solar otevřete webový prohlížeč
4. Do adresního řádku napíšete **10.10.100.253**

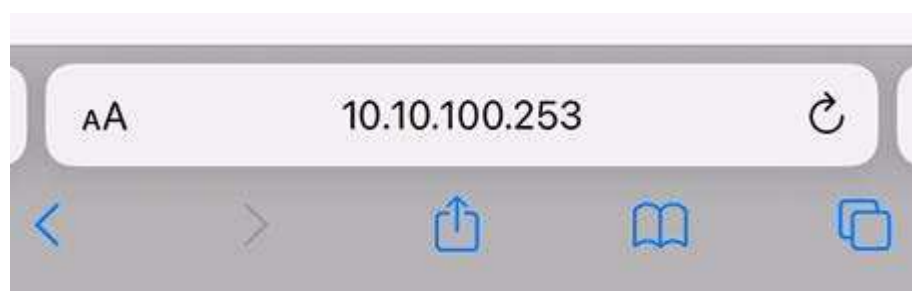


5. Přihlaste se - uživatelské jméno a heslo, které máte (admin/admin)

6. Prohlížeč přepněte do Angličtiny

7. Klikněte na start setup

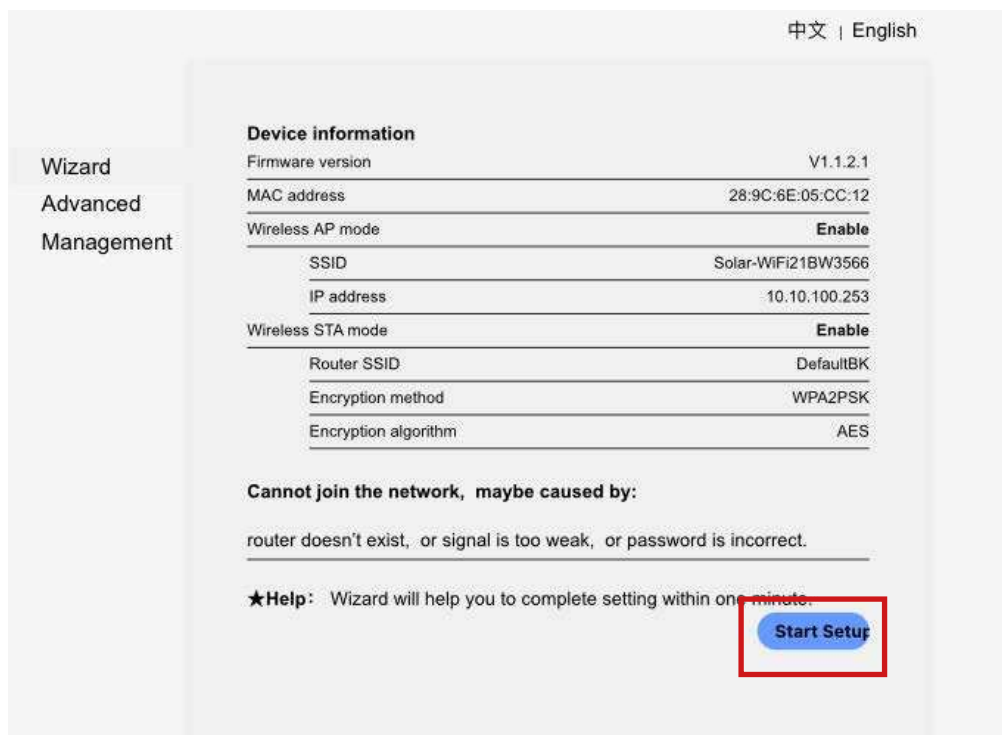

8. Vyberte ze seznamu vaši Wi-fi (s nejvyšší hodnotou RSSI) a klikněte na next

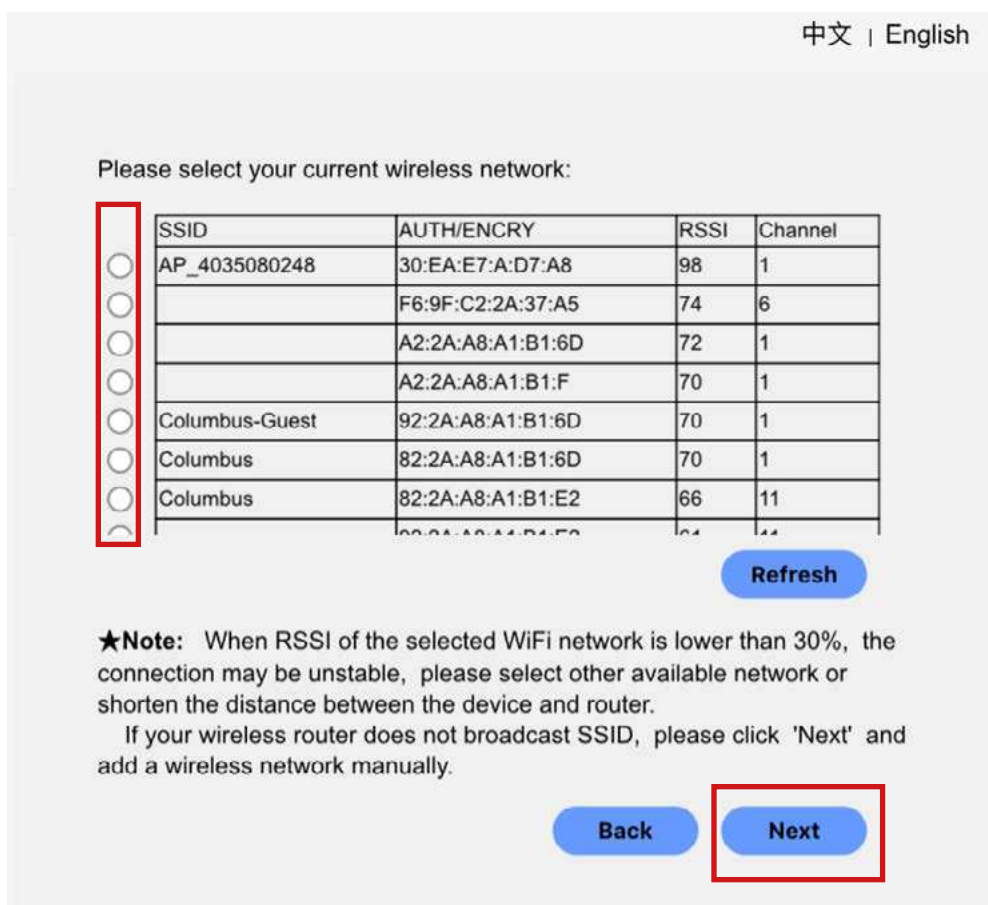

9. Pojmenujte svoji síť, zadejte heslo a klikněte na next

**Add wireless network manually:**

Network name (SSID)

Encryption method OPEN

**Please enter the wireless network password:**

Password:

**★Note:** case sensitive for SSID and Password.  
Please make sure all parameters of wireless network are matched with router, including password.

Back Next

10. Klikněte na tlačítko Complete

Save success!

The current configuration will take effect after restart.

If you still need to configure the other pages of information, please go to complete your required configuration.

Configuration is complete, you can go to the Management page, click on the restart device "OK" button.

Confirm to complete ?

Back Complete

odkaz na video manuál: <https://youtu.be/8iUNF8lkqzs>